




# INSTALLATION DATA

## ANS Z21.20


### AUTO IGNITION SYSTEMS

**NOTE:** Install Snap-Fit™ Universal Thermocouple so the pilot burner flame envelopes top 3/8" to 1/2" of the tip.

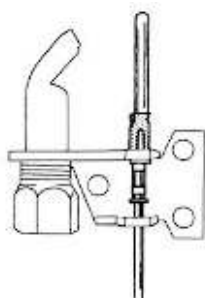


#### SLIM THERMOCOUPLE

Install in a clip-type bracket (requires no sheath).

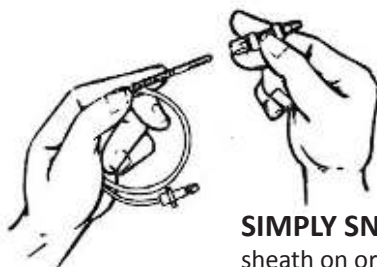


**SIMPLY SNAP** the sheath on or off, as the application requires.

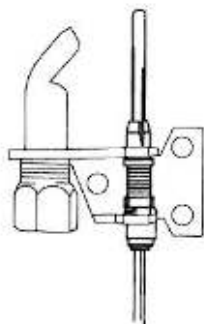

#### STANDARD THERMOCOUPLE

Install in a clip or screw-type bracket. Includes large clip and a thread pilot adaptor. Illustration shows sheath snapped into position. (The clip will hold the thermocouple firmly into position in either clip or screw-type bracket.)

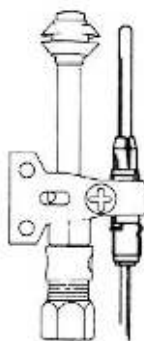

#### STANDARD THERMOCOUPLE

Installed in a clamp-type bracket. Illustration shows sheath snapped in to position.



191 E. North Avenue  
Carol Stream Illinois 60188 USA  
Customer Service  
Telephone 1.800.304.6563  
Facsimile 1.800.426.0804  
HVACCustomerService@robertshaw.com

For Technical Service  
Telephone 1.800.445.8299  
Facsimile 1.630.260.7294  
TechnicalService@robertshaw.com

Robertshaw®, Ranco®, Paragon® and Uni-Line® are trademarks of Robertshaw its subsidiaries and/or affiliated companies. All other brands mentioned may be the trademarks of their respective owners.

www.uni-line.com  
www.robertshaw.com  
©2014 Robertshaw  
07/14 -1-950 RevB